


INSTALLATION GUIDE FOR NOVASECURE™ LOCKING HANDLE SETS

CHECK THE CONTENTS OF THE BOX:

#	Description	Quantité
1	Exterior set with handle and key cylinder	1
2	Exterior trim with handle and button	1
3	2 1/16 in. Installation screws	2
4	Set of 2 keys	1
5	Weathertight neoprene pads	2
6	Centre striker plate	1
7	Upper/Lower striker plates	2
8	Screws for installing striker plates	7
9	Black casings for jamb striker plate holes	4
10	Allen key	1

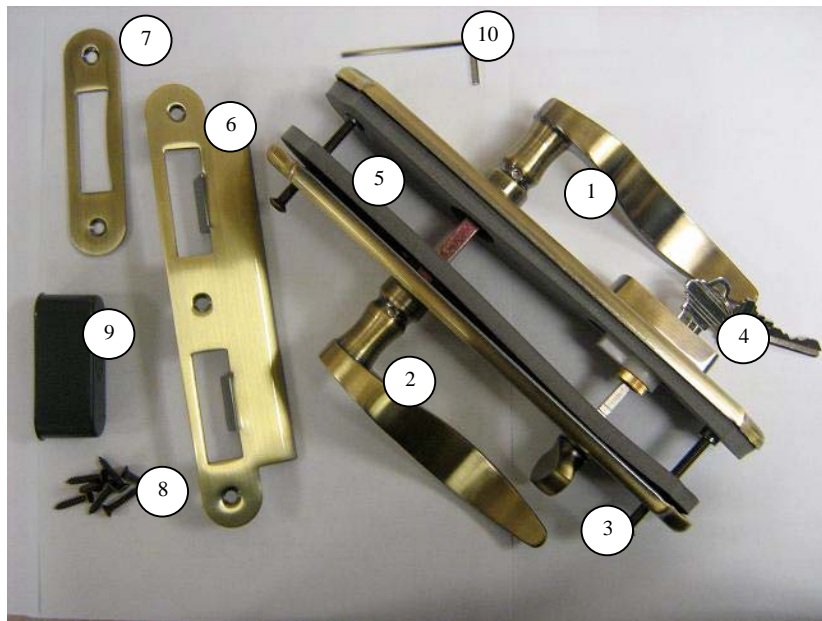

INSTRUCTIONS FOR INSTALLING NOVASECURE™

LEFT OR RIGHT SET FOR ACTIVE DOOR

1. Remove the 2 installation screws holding the 2 parts of the handle together.
2. Undo the set screw for the interior handle using an Allen key.
 - The set screw is under the handle.



3. Separate the handle set.
 - Make sure the square shank is properly inserted into the exterior handle.



Installation of the exterior set

1. Place a weathertight neoprene pad on the inside of the handle and position the set over the holes, on the outside of the door.
2. Turn the handle lever towards the hinges



3. Push the square shank through the square hole in the mechanism in the door and the flat shaft of the cylinder through the slot in the mechanism.



Installation of Interior trim

1. Place a weathertight neoprene pad on the inside of the handle and align the interior part of the handle with the square shank, making sure the lever is pointing towards the hinges.
2. Make sure the shaft in the cylinder is properly aligned with the slot for the button on the handle.



3. Attach the trim using the 2 installation screws



Operation of the new Multipoint locking system with locking button

Operation

To open or close the door, press down the lever on the handle.



Locking / Unlocking

From the inside

Locking :

- Pull the lever up to engage the locking points
- Give the button one quarter turn (90°) to lock the points in place.



Unlocking :

- Give the button one quarter turn (90°) to unlock the points.
- Press down on the lever to release the locking points and open the door.



From the Outside

Locking :

- Pull the lever up to engage the locking points
- Turn the key to lock the points in place.



Unlocking:

- Turn the key to unlock the points.
- Press down on the lever to release the locking points and open the door.

